
OMEGA-RL(80) SPARE PARTS LIST

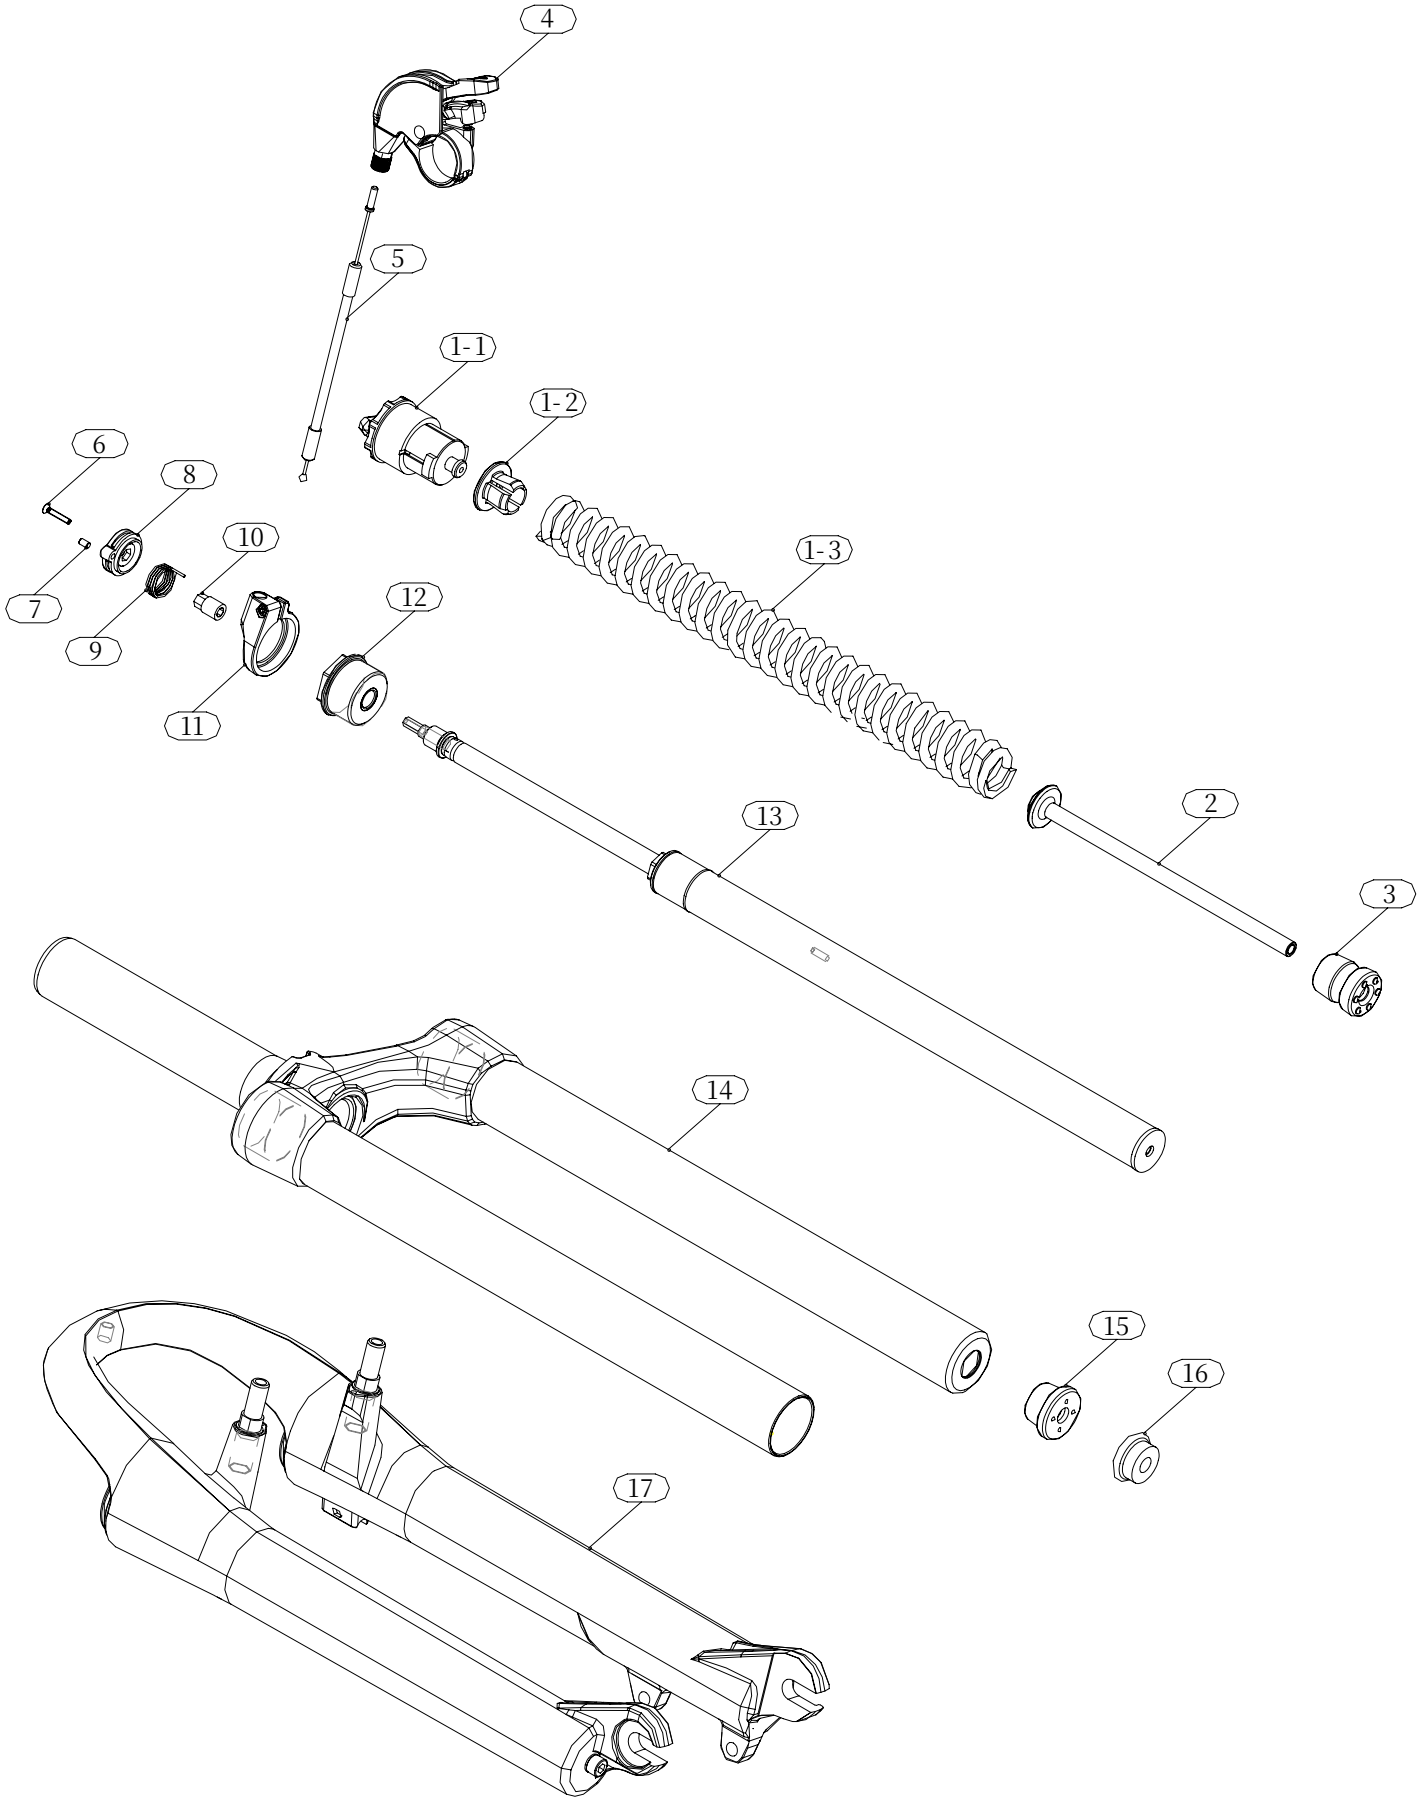

ID.NO.	PART NO.	DESCRIPTION	Q'TY
1A	H5GSP-U838	Coil Spring Assembly-K=1.1	1
or 1B	H5GSP-U838 -H	Coil Spring Assembly-K=1.3	1
or 1C	H5GSP-U838 -S	Coil Spring Assembly-K=0.91	1
1-1	H5FVP-2162-100	Adjuster Assembly	1
1-2	M5S32-2164-000	Spring Guide	1
1-3A	M5FXS-2350-110	Coil Spring-K=1.1	1
or 1-3B	M5FXS-2350-130	Coil Spring-K=1.3	1
or 1-3C	M5FXS-2350-091	Coil Spring-K=0.91	1
2	M5GAEJC125	Compression Rod	1
3	M5GSPB-503-40	Top-Out Bumper	1
4	H5GDP7ARL1	Remote control Assembly	1
5	H5GDP7ARL3-1	Remote Outline Assembly	1
6	1022A-02515-B	Bolt	1
7	M5GDP7ARL-013	Grub screw	1
8	M5GDPAK03	Turn Base	1
9	M5GDP7ARL-020	Corkscrew Coil Spring	1
10	M5GAC8-0404	Switch Stand	1
11	H5GDP8ARL6	Remote Outline Base	1
12	M5GAE8DB275	Fixed Guide	1
13	H5GDP6AK10	Travel lock-out Cartridge	1
14	H5GCR8U31KA2600	Crown Assembly(Head Parts 30mm)	1
15	M5GSPB-415-8	Top-Out Bumper	1
16	M5GAEMB10	Bottom-Out Spacer	1
17A	H5GFRU81-0000	Outer Leg Assembly	1
or 17B	H5GFRU81-1000	Outer Leg Assembly(on pivot boss)	1