HELLBENDER

BOTTOM BRACKET

CANE CREEK®


CANE CREEK

BB30/PF30 Threadfit

PF30 = 68mm, 73mm
BB30 = 68mm, 73mm

Installation

1. Grease
   - Graisse
   - Fetten
   - Grasso
2. Press
   - Presse
   - Einpressen
   - Pressare
3. Thread
   - Visser
   - Einschrauben
   - Avvitare
4. Torque 40Nm
   - Serrer
   - Festziehen
   - Serrare

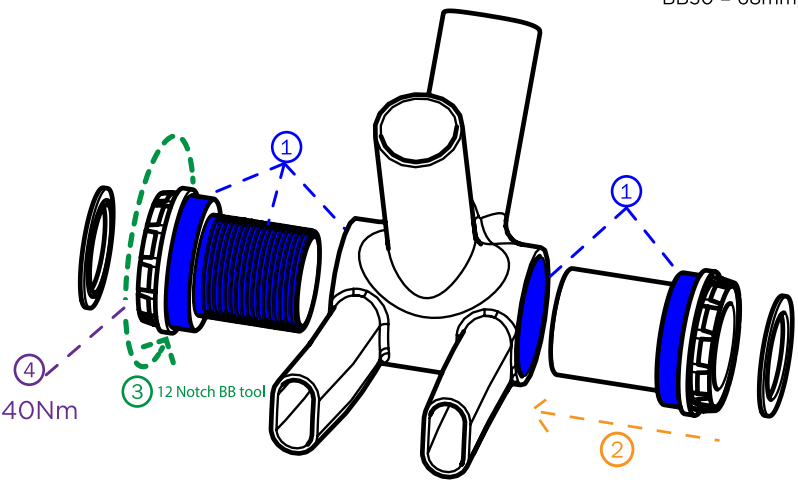

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.

CANE CREEK CYCLING COMPONENTS | 355 Cane Creek Road, Fletcher, NC 28732 | canecreek.com


CANE CREEK

BSA30 - Threaded

BSA30 = 68mm, 73mm

Installation

1. Measure
   - Mesure
   - Messen
   - Misurare
2. Grease
   - Graisse
   - Fetten
   - Grasso
3. Thread
   - Visser
   - Einschrauben
   - Avvitare
4. Torque
   - Serrer
   - Festziehen
   - Serrare

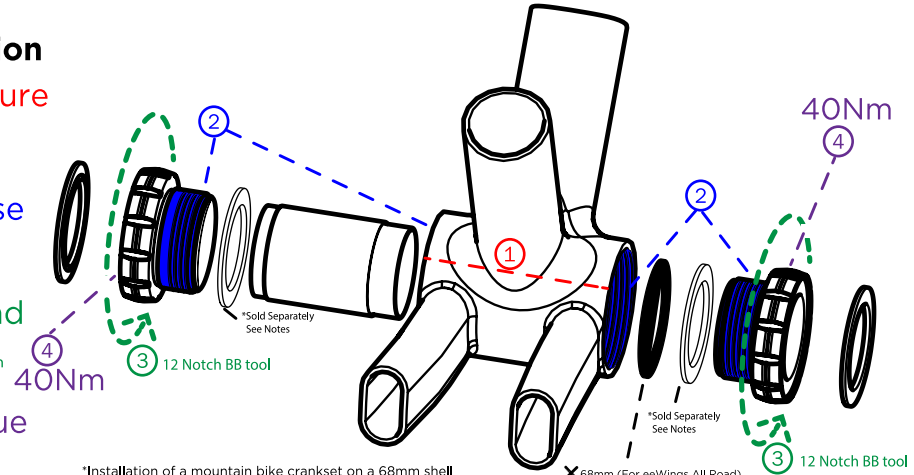

*Installation of a mountain bike crankset on a 68mm shell requires a Spacer Kit (Cane Creek Part Number: BAI0110) which contains (2) aluminum 2.5mm bottom bracket spacers.

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.

CANE CREEK CYCLING COMPONENTS | 355 Cane Creek Road, Fletcher, NC 28732 | canecreek.com

CANE CREEK


PF41 - Pressfit

30mm Spindle ONLY

PF41 = 86.5, 89.5, 92, 121, 124, 132

Installation

1. Grease
   - Graisse
   - Fetten
   - Grasso
2. Press
   - Presse
   - Einressen
   - Pressare

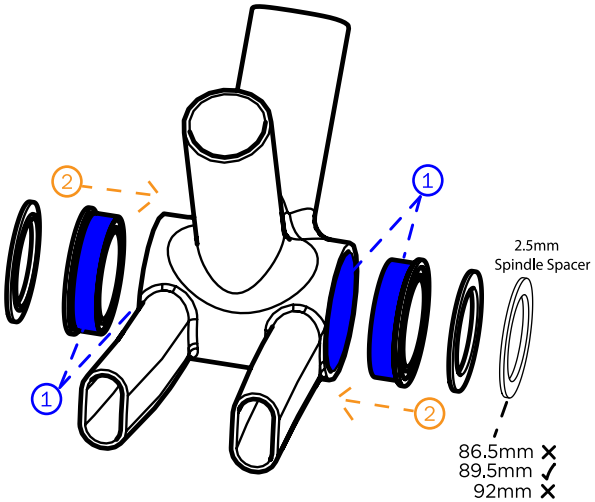

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.


CANE CREEK

T47 - External

T47 = 68mm, 73mm

Installation

1. Measure
   - Mesure
   - Messen
   - Misurare
2. Grease
   - Graisse
   - Fetten
   - Grasso
3. Thread
   - Visser
   - Einschrauben
   - Avvitare
4. Torque 40Nm
   - Serrer
   - Festziehen
   - Serrare

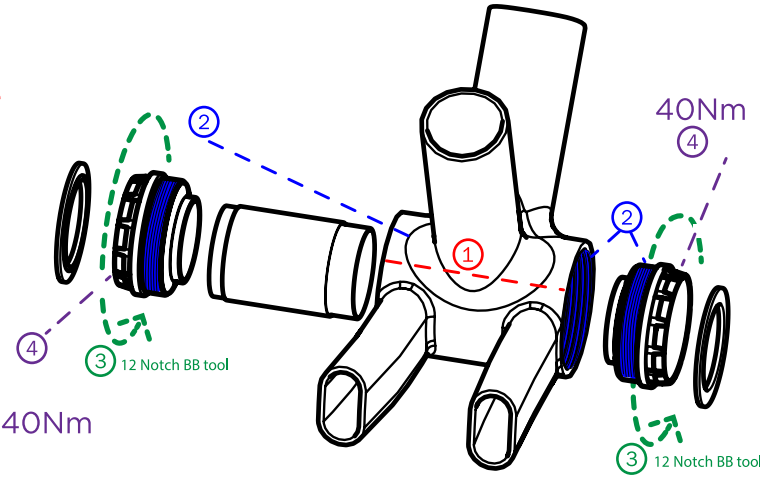

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.

CANE CREEK

T47 - Intenral

T47i = 86mm/92mm


Installation

Measure
Mesure
Messen
Misurare

Grease
Graisse
Fetten
Grasso

Thread
Visser
Einschrauben
Avvitare

Torque 40Nm
Serrer
Festziehen
Serrare

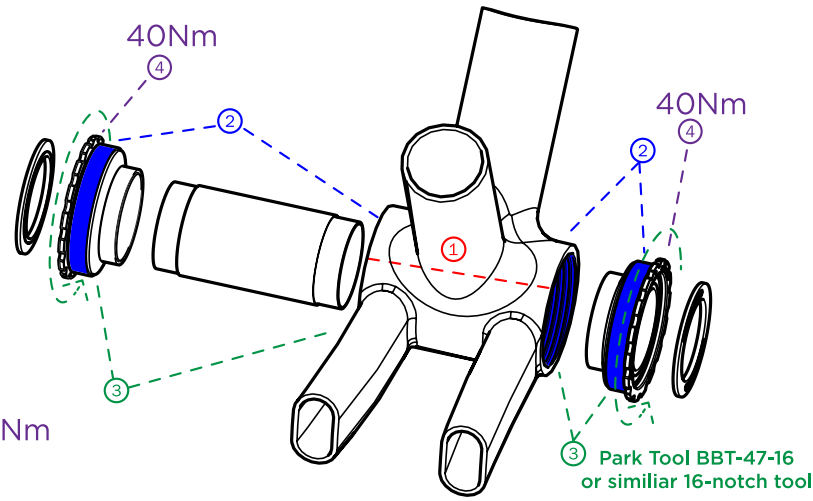

eeWings Cranksets Require (1) Additional Spindle Spacer on the Driveside of the Crank - see eeWings instructions.