
CANE CREEK

HELM


Install:

1. Ensure fork casting area is clean and clear of debris.
2. With a 3mm hex wrench, lightly snug all three bolts to casting and then back out 2-3 turns.
3. Install fender over bolts and then apply downward pressure to click in to place. (there should be an audible click)
4. Torque bolts to 2Nm.

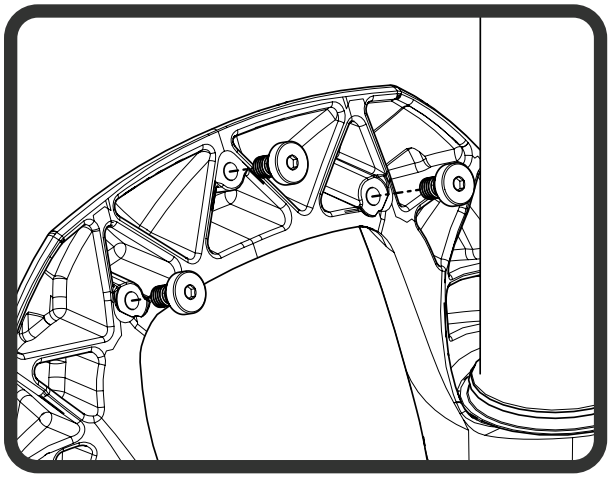

To Remove:

1. Back bolts out 2-3 turns.
2. Remove fender by lifting up from the tab on the mounting surface and then out.
3. Bolts can remain in casting if desired. Torque to 2Nm max.

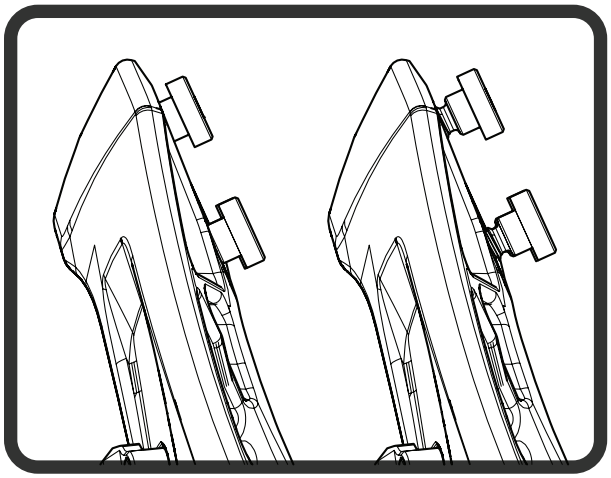


Warnings

Max tire size is 2.5". Actual dimensions of tires will vary and clearance between tire and fender must be checked manually.

Bolt torque should be checked periodically. Grease may be applied to bolt threads but is not required.

This fender is only designed to fit Cane Creek Helm forks and should not be used with any other manufacturer's fork.

Only the supplied bolts should be used. Replacement bolts can be sourced through Cane Creek Cycling Components if needed.

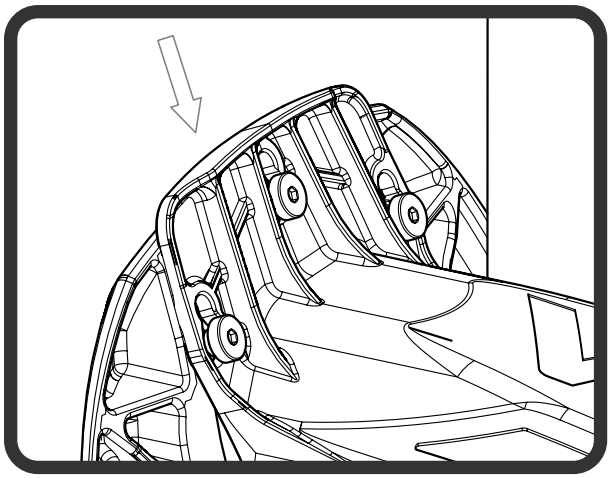

Cane Creek Cycling Components
355 Cane Creek Rd
Fletcher North Carolina 28732

1.828.641.9560
canecreek.com