
# ROLLAMAJIG™
## INSTALLATION INSTRUCTIONS

### 3 STEPS TO CRISPER SHIFTING:

1. Shift bike to middle ring in front and smallest cog in the rear.

2. Housing length: you will need to shorten your housing length to accommodate the Rollamajig.


Hot Tip! It is a good idea to cut the housing a little long, removing a little at a time until it's perfect.

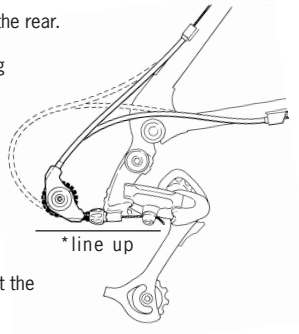


• The bottom of the Rollamajig should line up approximately with the bottom of the derailleur, as shown in diagram.*

• If you are using Gore® Ride-on cables, you need to cut the liner back so it doesn't touch the pulley.

3. Reinstall the cable and housing making sure the cable is fully seated in the pulley groove. Any major cable adjustment should be made at the shifter, but fine tuning can be made at the Rollamajig.

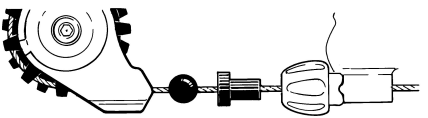

**©2002, Avid LLC**
**www.avidbike.com**