VELO ORANGE

Instructions
Grand Cru Zeste Brakes



You'll need to install the springs on the brake arms before putting them on the posts. Hook the long end on the adjuster through the cutout in the brake.


Gold goes on the right, silver on the left.



Use a light coat of grease on the cantilever posts and the posts' threads.

Install the other end of the spring in the middle hole of each cantilever post.

The washer goes under the head of the fixing bolt.

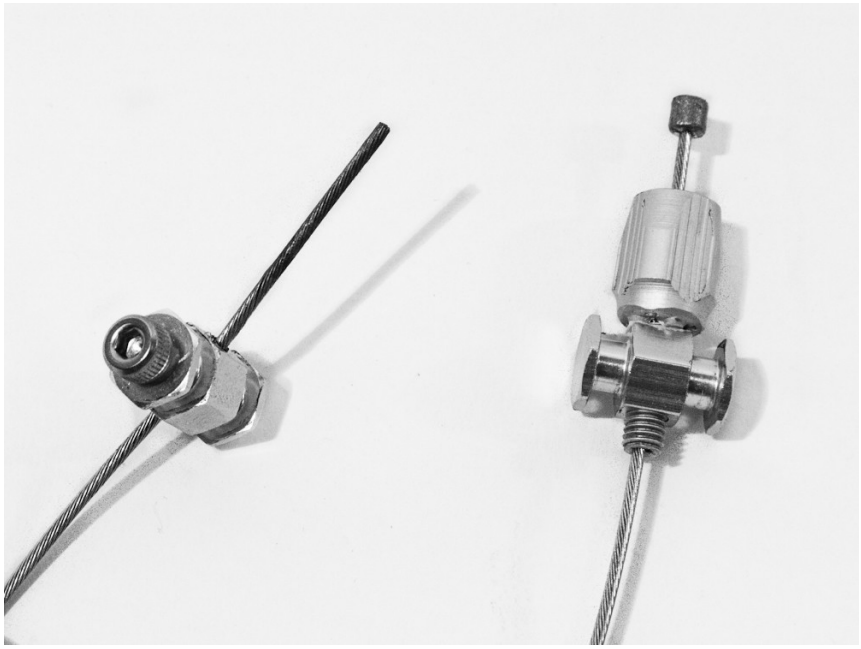

Slip the adjuster over the cable and tighten the anchor.



The 13mm nut is for adjusting the pads' height and pitch.

The brakes should look like this when you're finished. The straddle cable should be around 6" high.