ENVE® Composites, LLC
Ogden, UT 84404, USA


# ENVE® Aero Road Bar Clip-On Installation

## Tools Required:

-4mm allen tool
-Cable/Housing cutters
-Tile saw or hack saw
-Cutting guide

## Included Hardware:

**Bolts:**




8mm 16mm


**Other:**



Bar extension plug

## Step 1 :


Mount extension clasps to desired width.

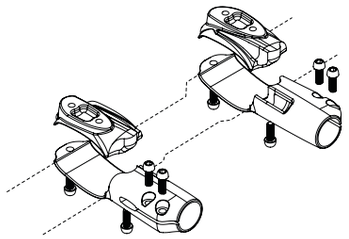


## Step 2 :

Determine desired postion and direction of arm pad carriers. Use 16mm bolts and torque 5Nm.


Note: Inserting extensions may help achieve desired armpad position.

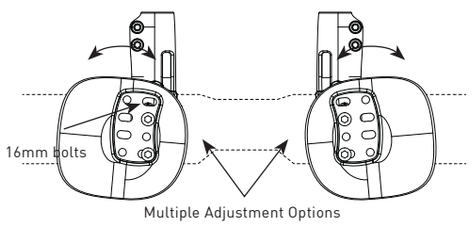

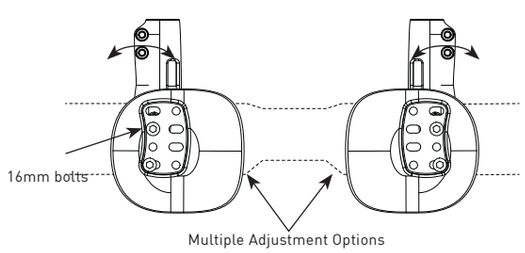
## Step 3 :

After installing arm pad carriers, place arm rest padding onto velcro and press down firmly.

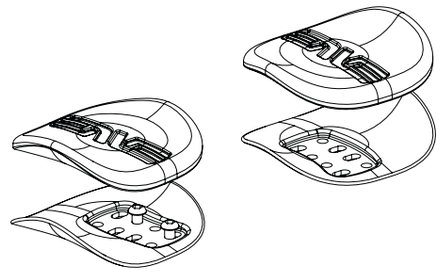


## Step 4 :

Determine desired extension length by placing forearms onto arm rests with extensions inserted into extension clasps.

## Step 5 :

Cut extensions to preferred size and bend.
(Measure twice cut once)

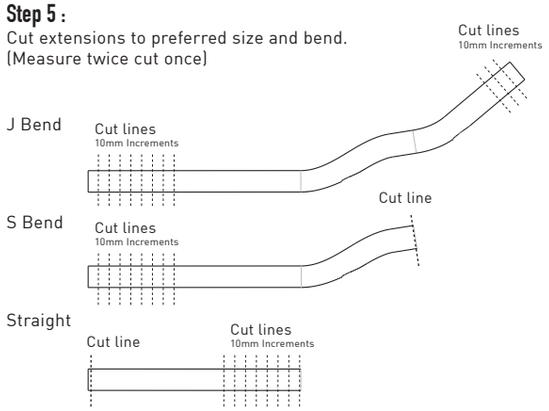


Note: If using the straight extension option, rotate extension 180 degrees so the multiple cut increments face outward.


## Step 6 :

After cut is complete, inspect for and remove any loose fibers by lightly sanding the recently cut area.


Note: Use Scotchbrite or fine grit sandpaper. (160 Grit +)

## Step 7 :

Insert extensions to extension clasps.

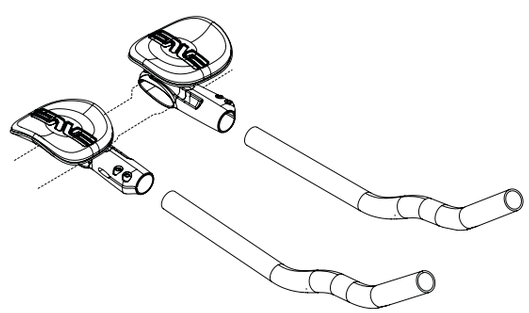


Note: End of extension must be visible inside the minimum insertion window.

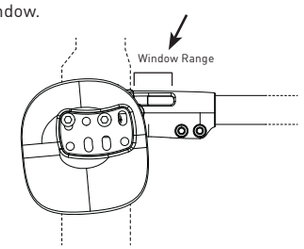



## Step 8 :

Rotate extensions to desired position. Fasten 8mm bolts.
(Torque 5Nm)

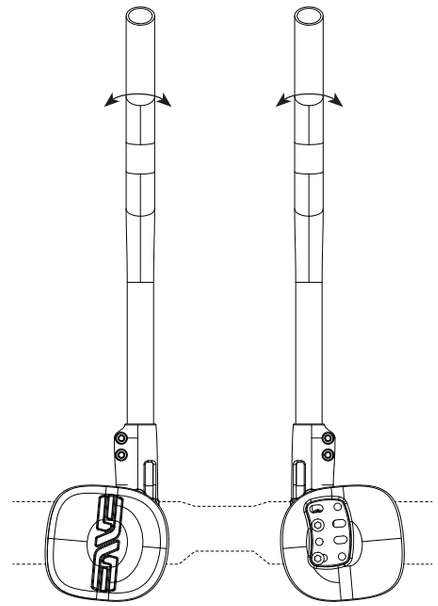


## Step 9 :

Rotate entire Aero Bar and clip-ons to desired angle in the handlebar stem clamp.

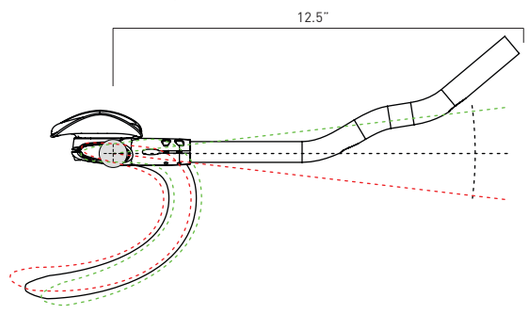


Note: Begin tightening bolt A before bolt B and alternate by 1Nm steps on each until both are equally fastened to 5Nm.

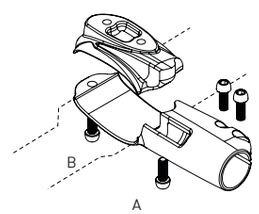


## Step 10 :

Install housing and cable if applicable.

Housing / Cable

