

Carbon Mountain Stem Installation Instructions

Tools Needed:





4mm Torque Wrench (5.5Nm)


1.

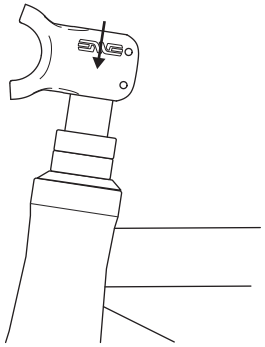


2.

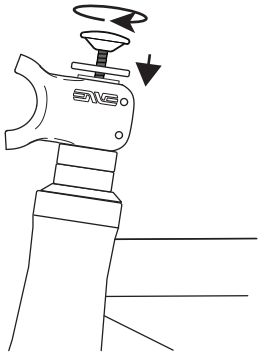

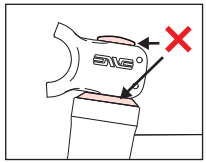


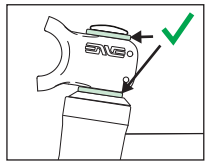


3.

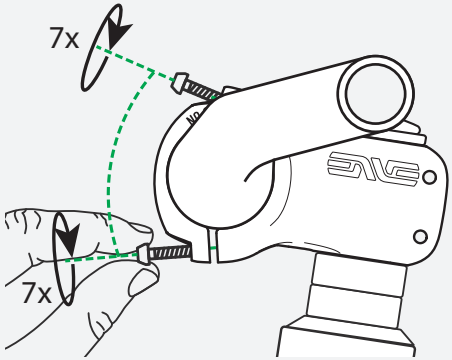


4.

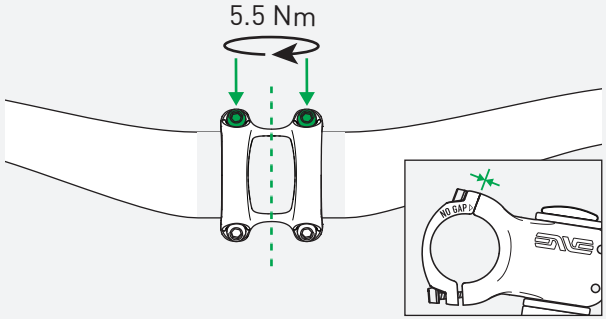

5.

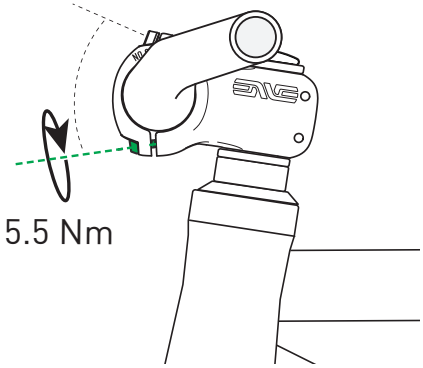

6.

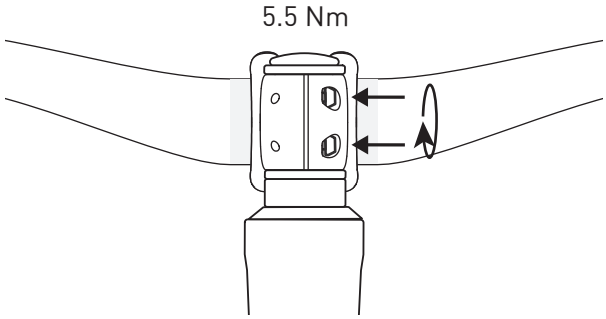

ENVE® Carbon Mountain Stem Installation Instructions

ENVE® Composites, LLC
Ogden, UT 84401, USA