ENVE Custom Road Frame Finishing Kit

Install Overview

Tools Needed:



Scissors



Hair Dryer

Parts Included:


1 Mesh Wire Sleeve (x1)


2 Small Shrink Tubing (x1)

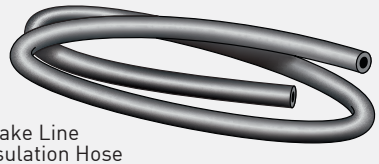

3 Brake Line Insulation Hose

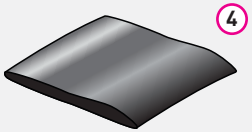
4 Large Shrink Tubing (x1)


ENVE Custom Road Frame Finishing Kit

Rear Derailleur Wire Reinforcement


1.

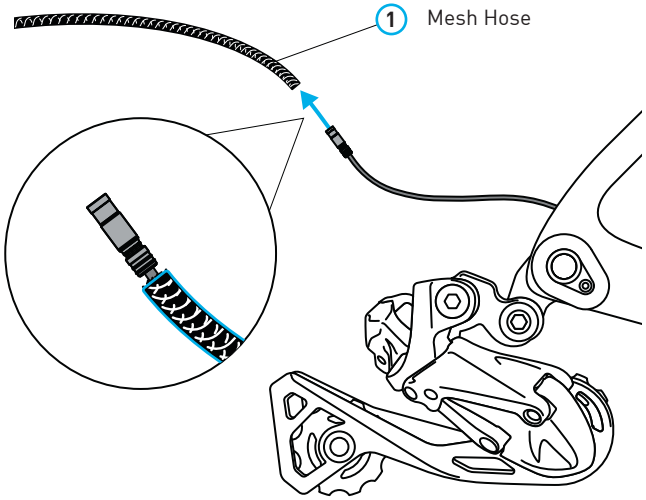


2.

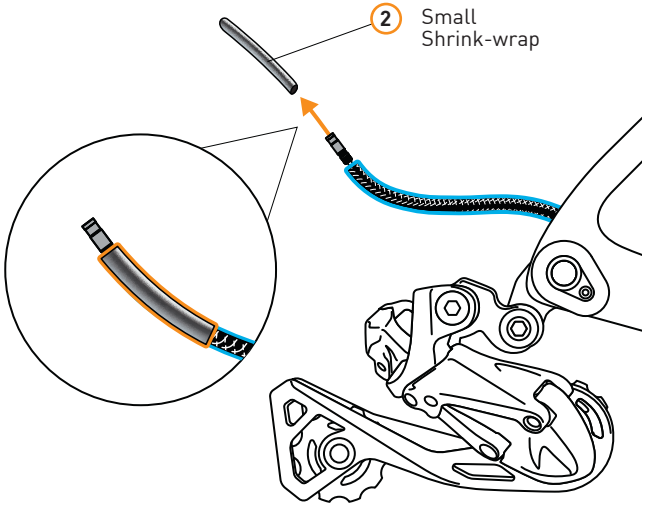

3.

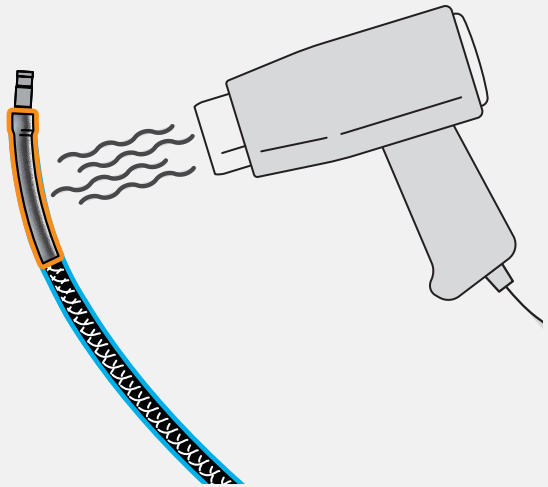


4.

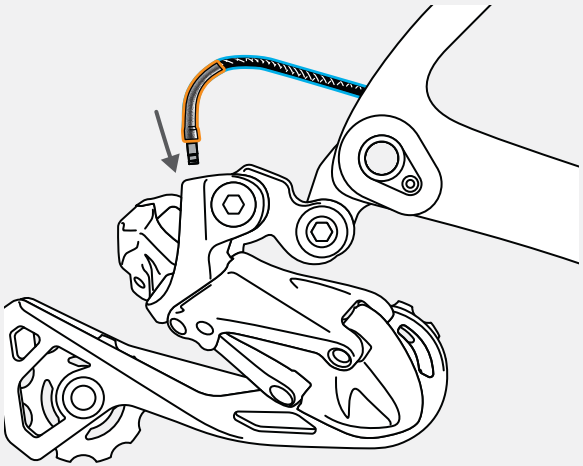


Fork / Brake Hose Routing Sleeve

1.

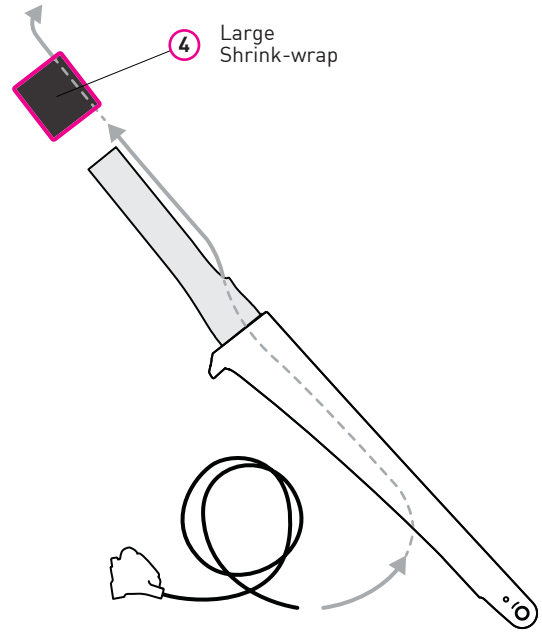


2.

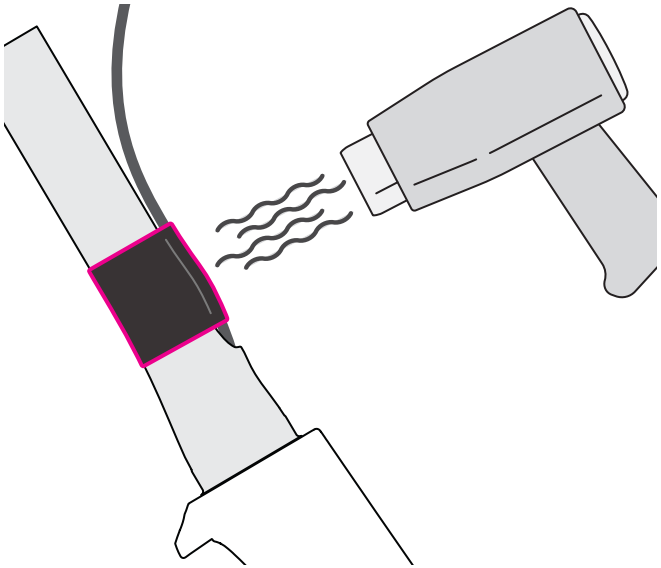


ENVE Custom Road Frame Finishing Kit

Brake Line Insulation Hose


1.

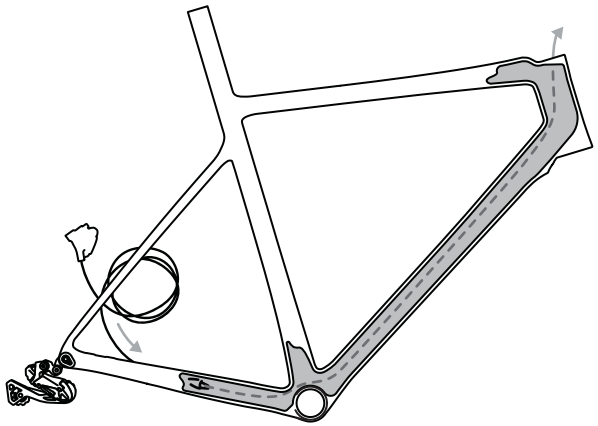


2.

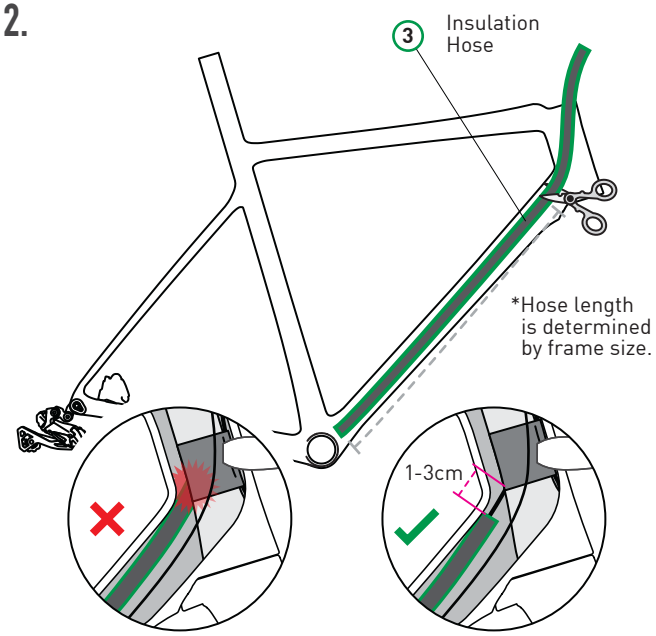


3.

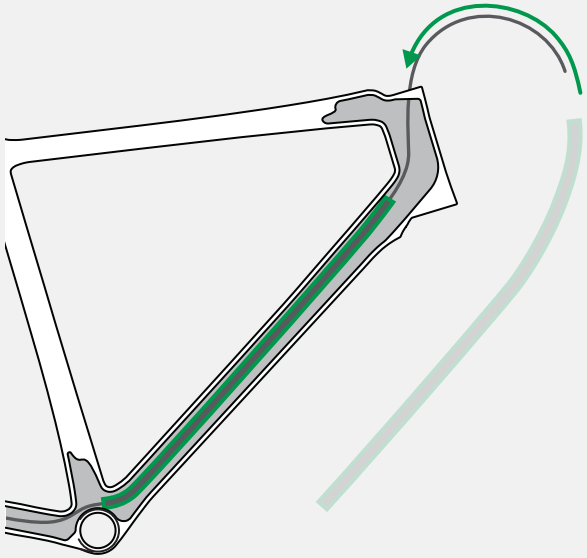

4.

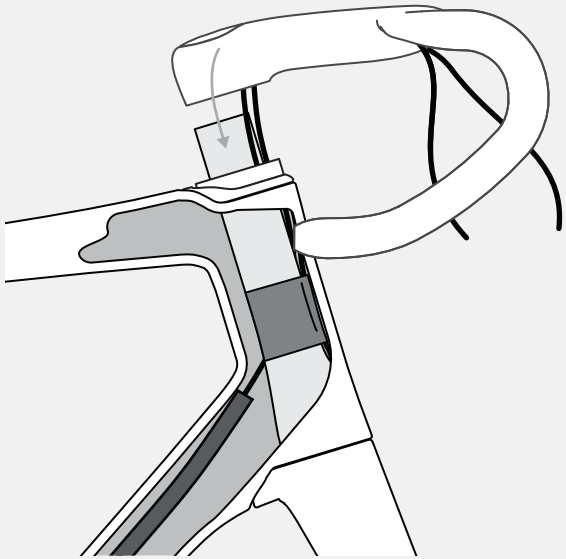

5.

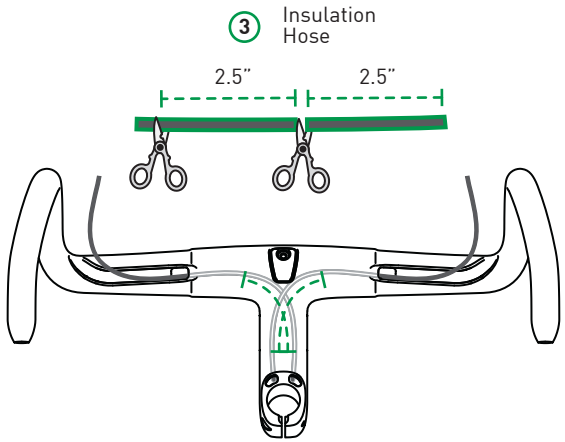

5.

