





MTN Fork Boost Installation Instructions

Tools Needed:

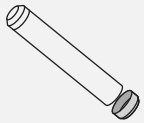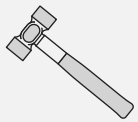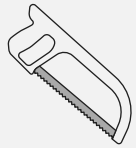


4, 5, 6mm Adjustable Torque Wrench,







100 grit


1.

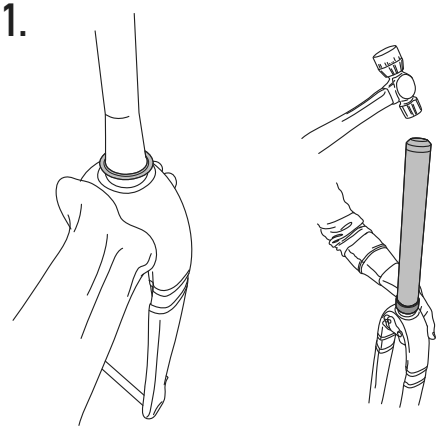


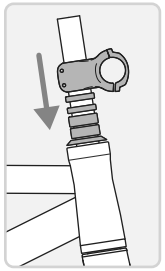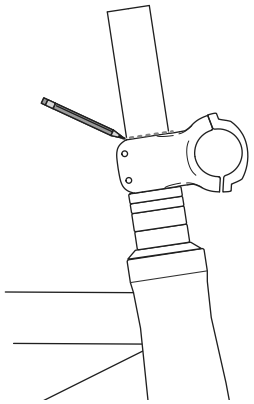2.





3.

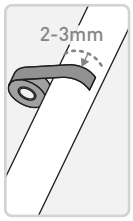


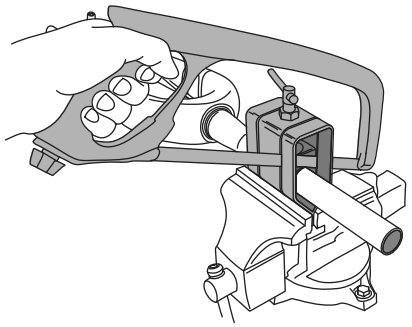



4.

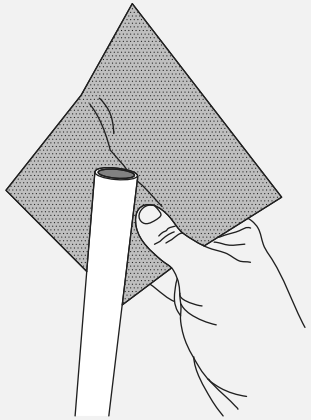



5.

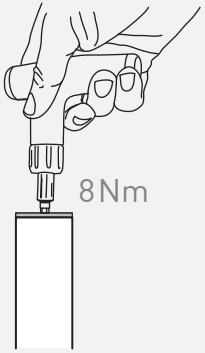6.

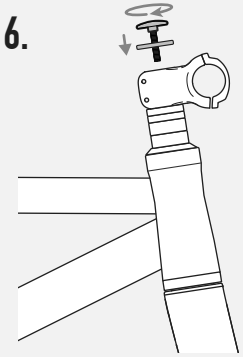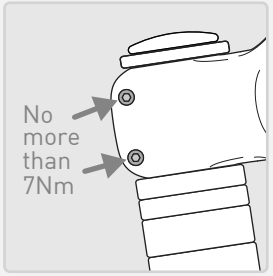



7.

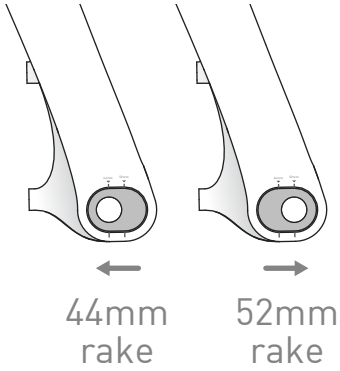



8.


52mm rake / 160mm rotor

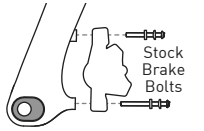


52mm rake / 180mm rotor

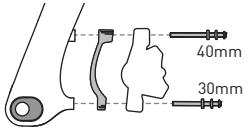



44mm rake / 160mm rotor

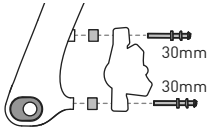

44mm rake / 180mm rotor

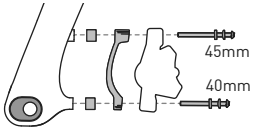

9.

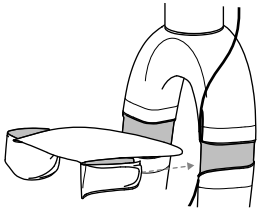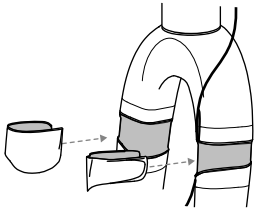ENVE MTN Fork Boost
Installation Instructions

ENVE Composites, LLC
Ogden, UT 84401, USA