ENVE® Composites, LLC
Ogden, UT 84404, USA


ENVE® Road Bar Clip-On Installation

Tools Required:

-4mm allen tool
-Cable/Housing cutters
-Tile saw or hack saw
-Cutting guide

Included Hardware:

Bolts:



8mm 16mm

Other:




Bar extension plug

Step 1 :

Mount extension clasps to desired width. Tighten bolts enough to hold clasps inplace but not yet completely fastened.


Note: Logos on attachment face outwards.

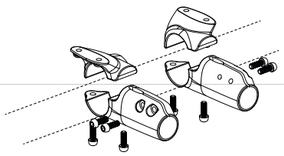


Step 2 :

Determine desired postion and direction of arm pad carriers. Use 16mm bolts. (Torque 5Nm)


Note: Inserting extensions may help locate desired armpad position.

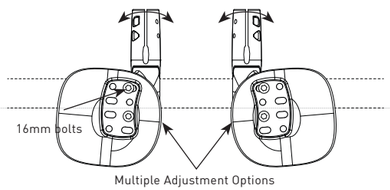

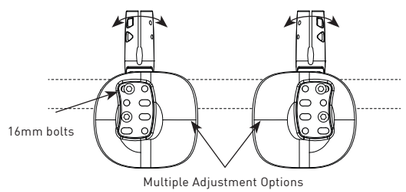

Step 3 :

After installing arm pad carriers, insert arm rest padding onto velcro and press down firmly.

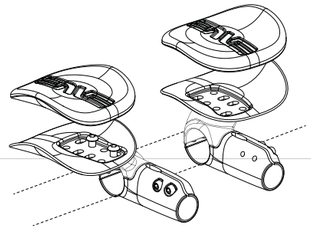


Step 4 :

Determine desired extension length by placing forearms onto arm rests with extensions inserted into extension attachments.

Step 5 :

Cut extensions to preferred size and bend.
(Measure twice cut once)

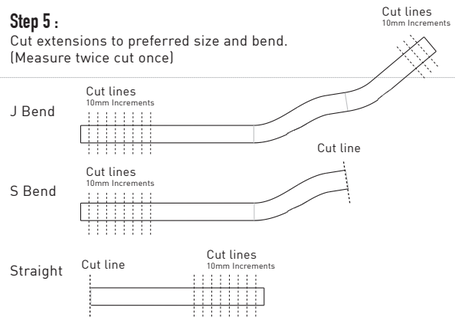


Note: If using the straight extension option, rotate extension 180 degrees so multiple the cut increments face outward.

Step 6 :


After cut is complete, inspect for and remove any loose fibers by lightly sanding the recently cut area.

Step 7 :

Insert extensions to extension clasps.

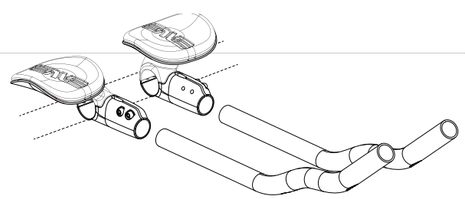


Note: End of extension must be visible inside the minimum insertion window.

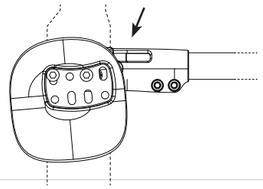


Step 8 :

Rotate extensions to desired position. Fasten 8mm bolts.
(Torque 5Nm)

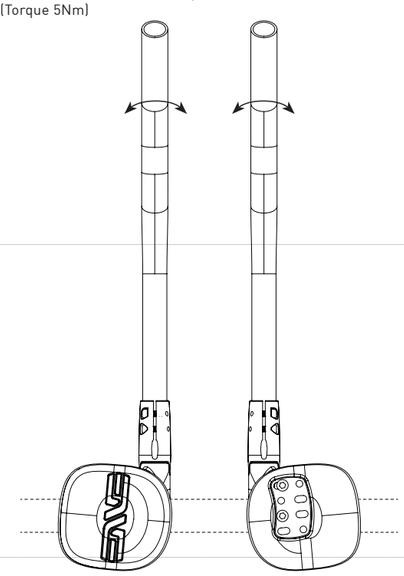


Step 9 :

Adjust bar attachments to desired angle.

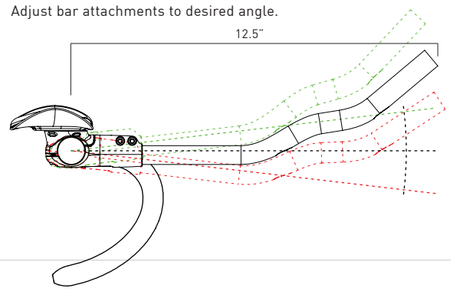

Note: Begin tightening bolt A before bolt B and alternate by 1Nm steps on each until both are equally fastened to 5Nm.

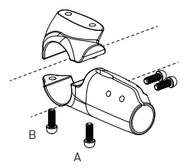

Step 10 :

Install housing and cable.

Housing / Cable

