
Carbon Road Stem Installation Instructions

Tools Needed:




4mm Torque Wrench (5.5Nm)




5mm Allen Key


1.

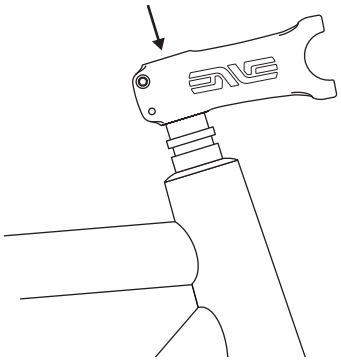


2.

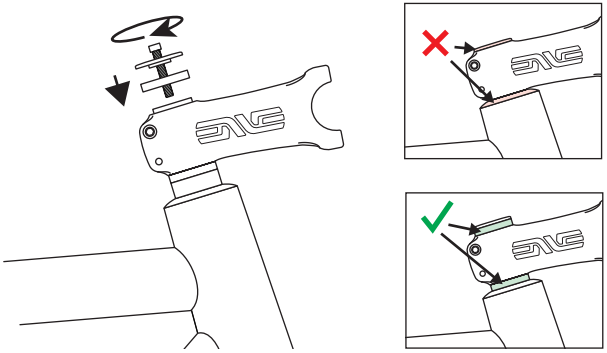

3.

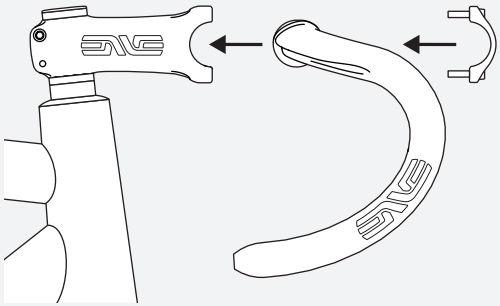


4.

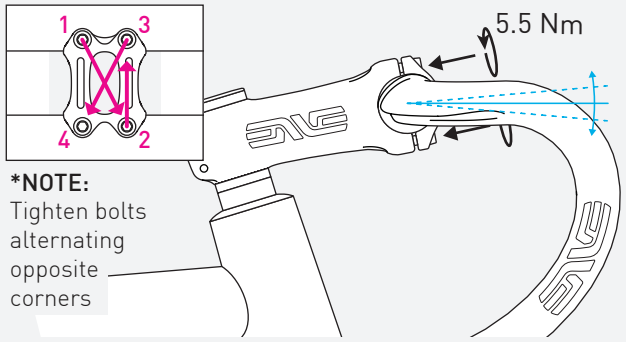


***NOTE:**
Tighten bolts alternating opposite corners

5.

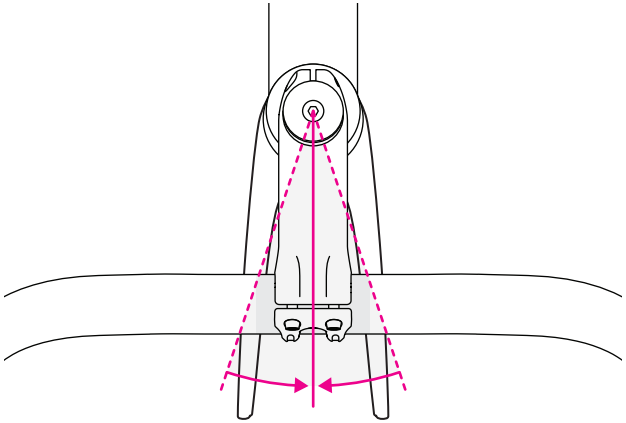

6.

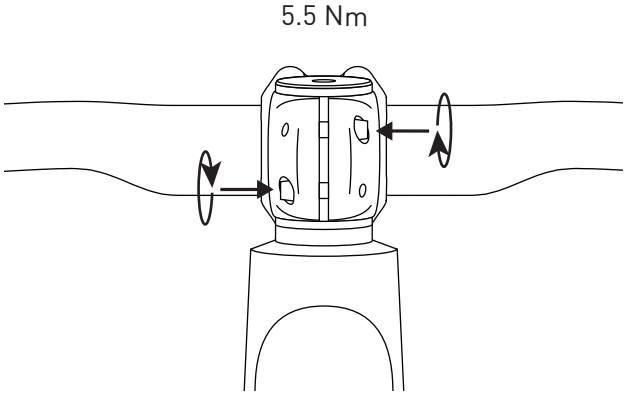

ENVE Carbon Road Stem
Installation Instructions

ENVE Composites, LLC
Ogden, UT 84401, USA