
Don't forget to register your product.

Seatpost Wedge Installation

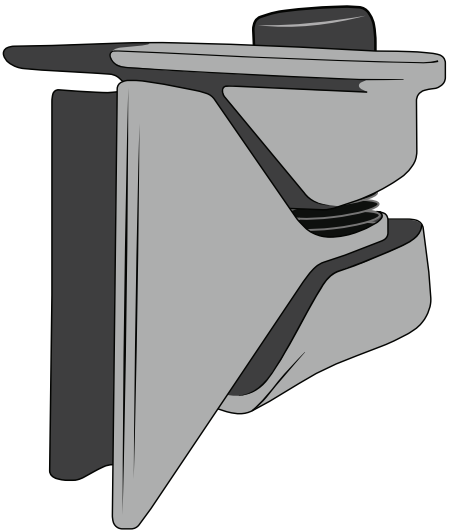

Tools Needed:







1. Ensure that seatpost is installed to a minimum depth of 75 mm to meet minimum insertion requirements.

2. Apply carbon grit paste to the wedge clamp seatpost interface, as indicated above, and insert seatpost.

3. Tighten the seatpost wedge bolt using a 5 mm torque wrench to 6 Nm.

