K007025 Attack Linkage Rebuild Kit

K007025

Attack 2.0/3.0 linkage rebuild kit

This Kit fits:
2000: Attack 2.0
2000: Attack 3.0

CAUTION: K2 Bike strongly recommends that this rebuild kit be installed by a K2 Bike dealer, or other qualified technician. Improperly installed rebuild kits can be extremely dangerous and can result in failure during use and severe injury.

This kit includes:

QTY	Part#	Description
4	16626	Bushing, flanged
1	16629	Pivot axle with screw
2	16631	Pivot axle


Torque Specifications:

Torque	Part#	Description
80 in-lbs	16335	Upper linkage bolt
80 in-lbs	16645	Lower linkage bolt

It is highly recommended to download the exploded view drawing of the 2000 Attack from the tech library on **www.k2bike.com** before you start working on your bike.

Instructions:

1. Remove the rear shock and thoroughly clean the shock linkage area of the bike.
2. Remove the two bolts that attach the seat stay to the linkage. And remove the pivot axles.
3. Remove one of the bolts from the upper linkage pivot and use the remaining linkage to remove the axle from the frame.
4. Remove the flanged bushings from the frame and the seat stay by carefully prying them out using a sharp wide bladed screwdriver.
5. Clean the pivot bores thoroughly.
6. Lightly grease the pivot bores of the frame and the seat stay and press the new bearings in until flush with their seating surface.
7. Lightly grease the linkage pivot axle and press into the frame until it seats against the flange of the flanged bushing.
8. Install the other linkage, but do not fully tighten the bolt yet.
9. Install the pivot axles of the lower linkage pivot and tighten the bolts to 80 in-lbs. Tightening these two bolts will align the linkage and the remaining bolt on the upper linkage pivot can now be tightened.
10. Reinstall the shock onto the frame.

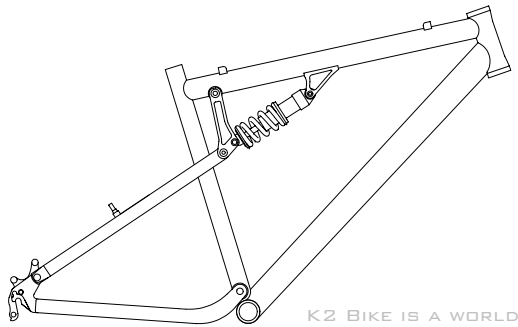

K2 Bike is a world
Leader in the design,
Marketing and sales of high quality
bikes and accessories for Road, Mountain and BMX use.